




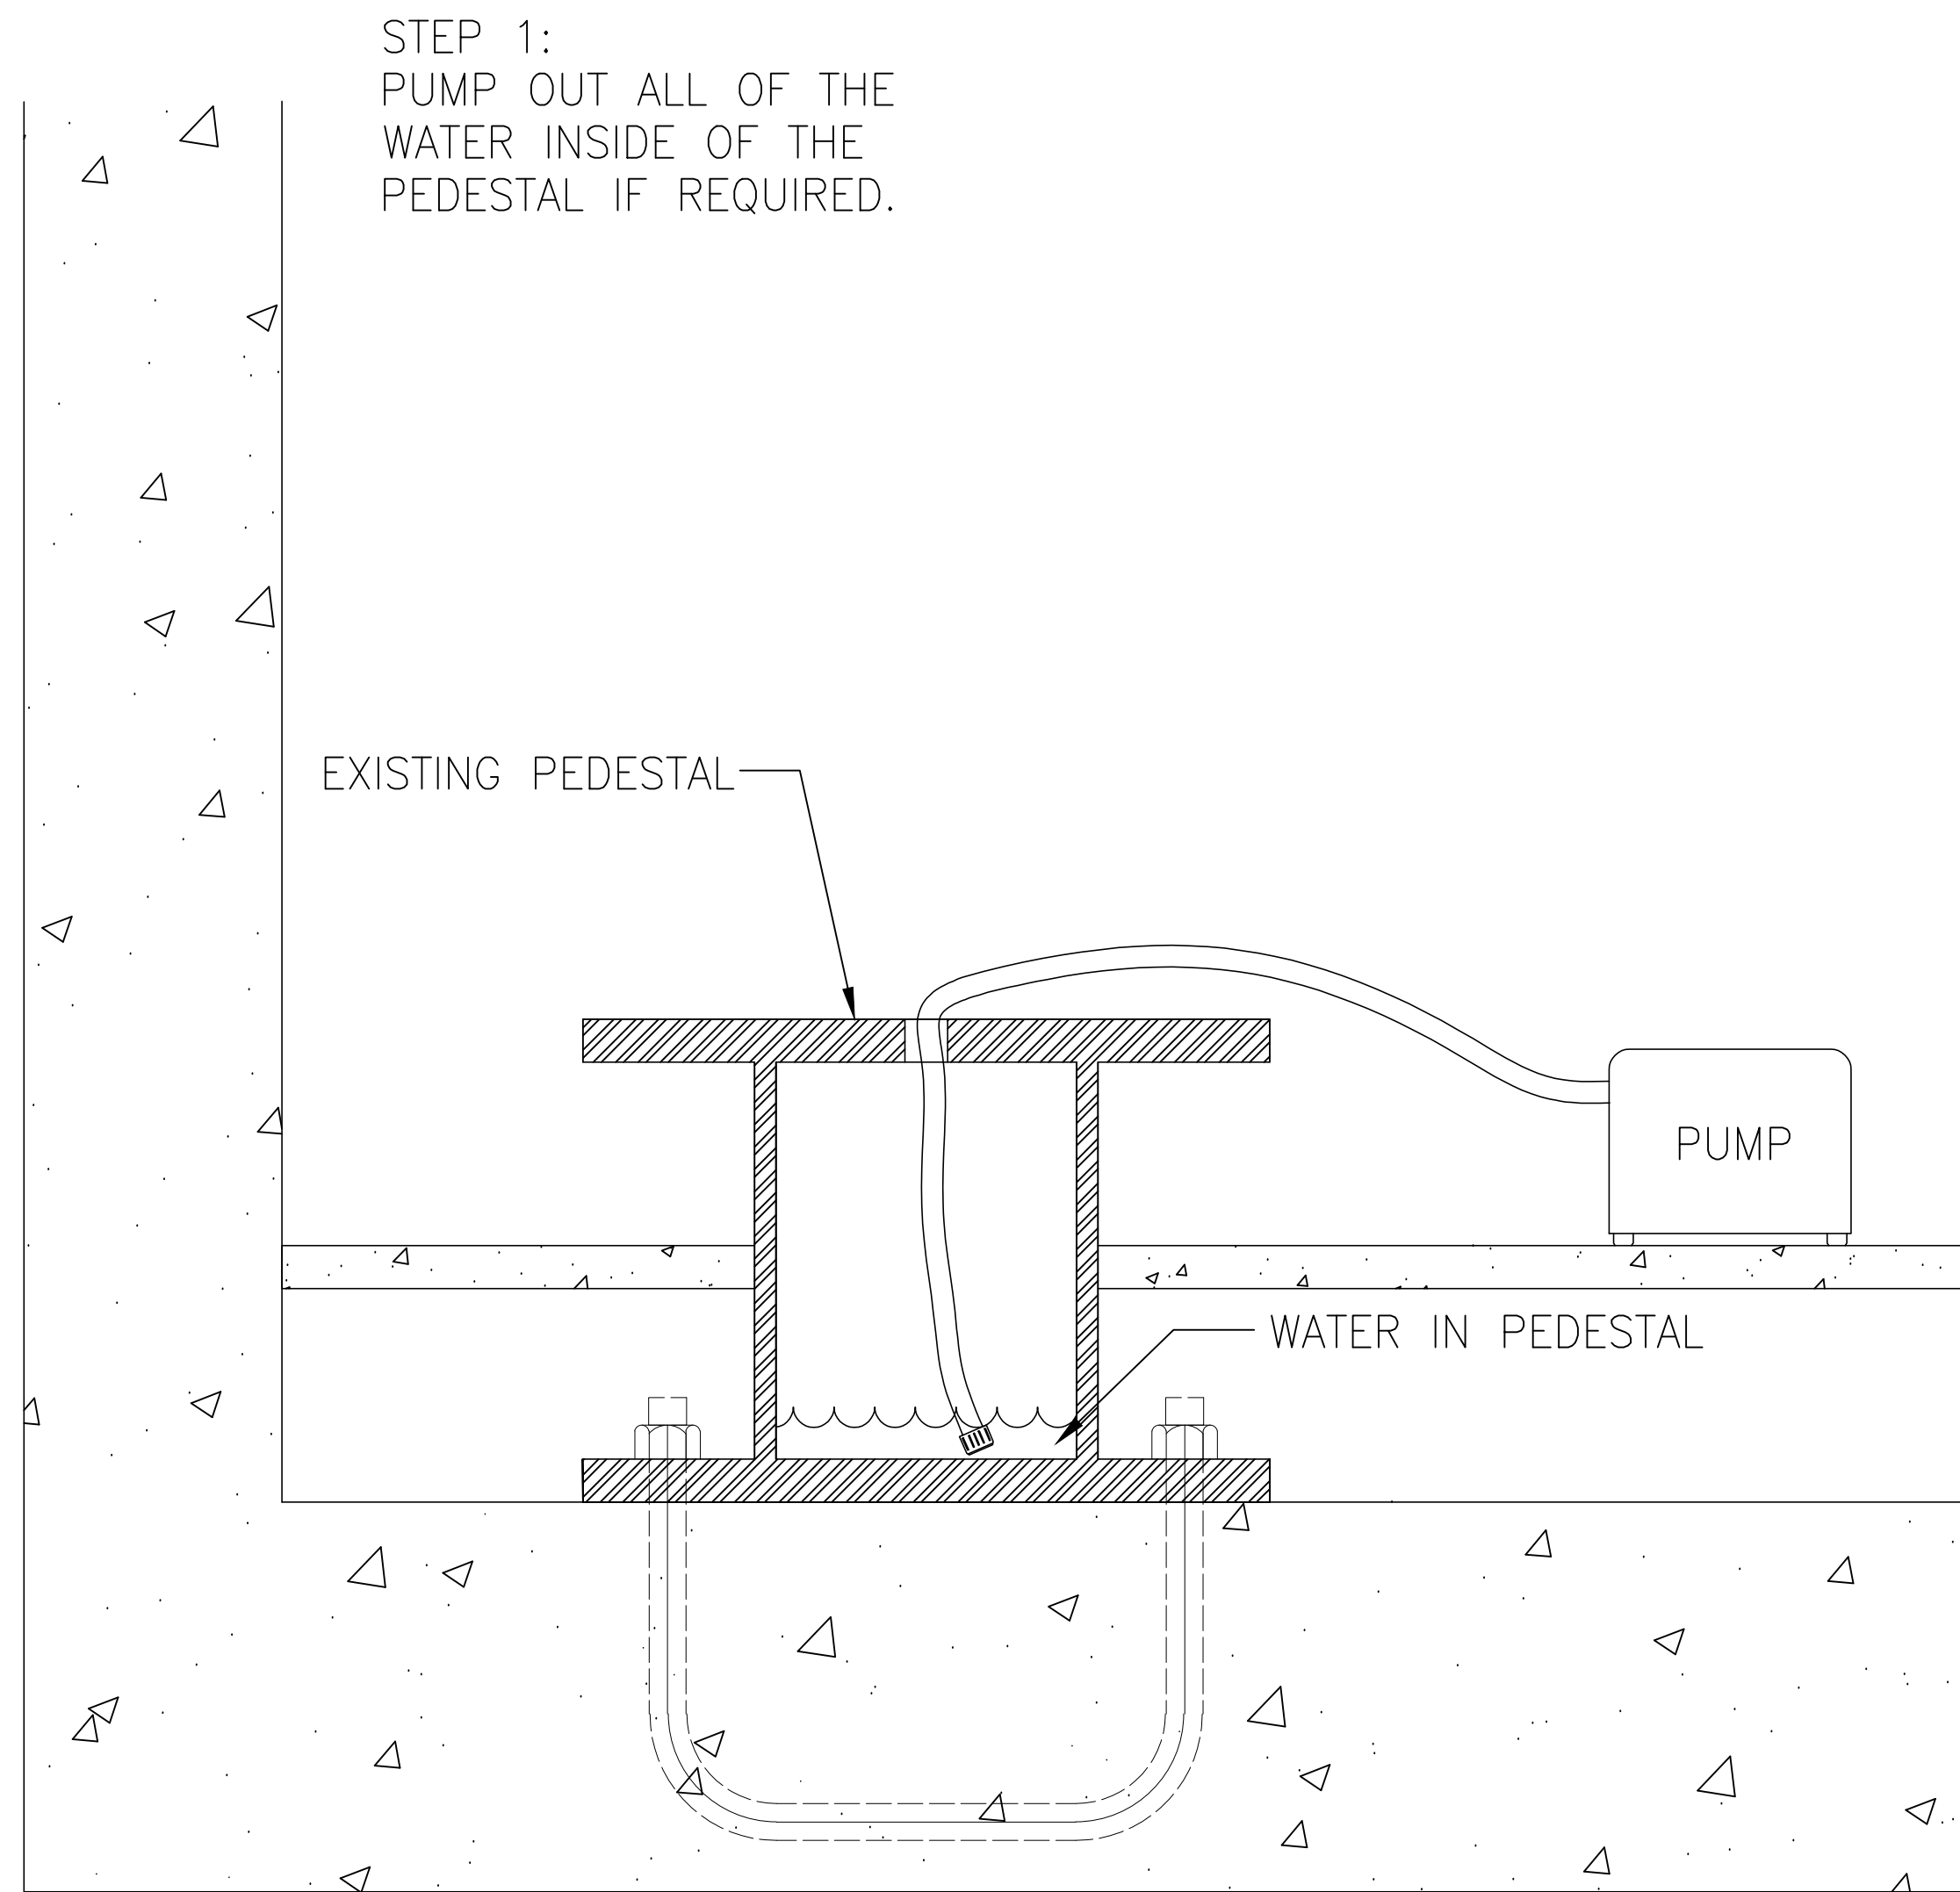


1 STEP ONE
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

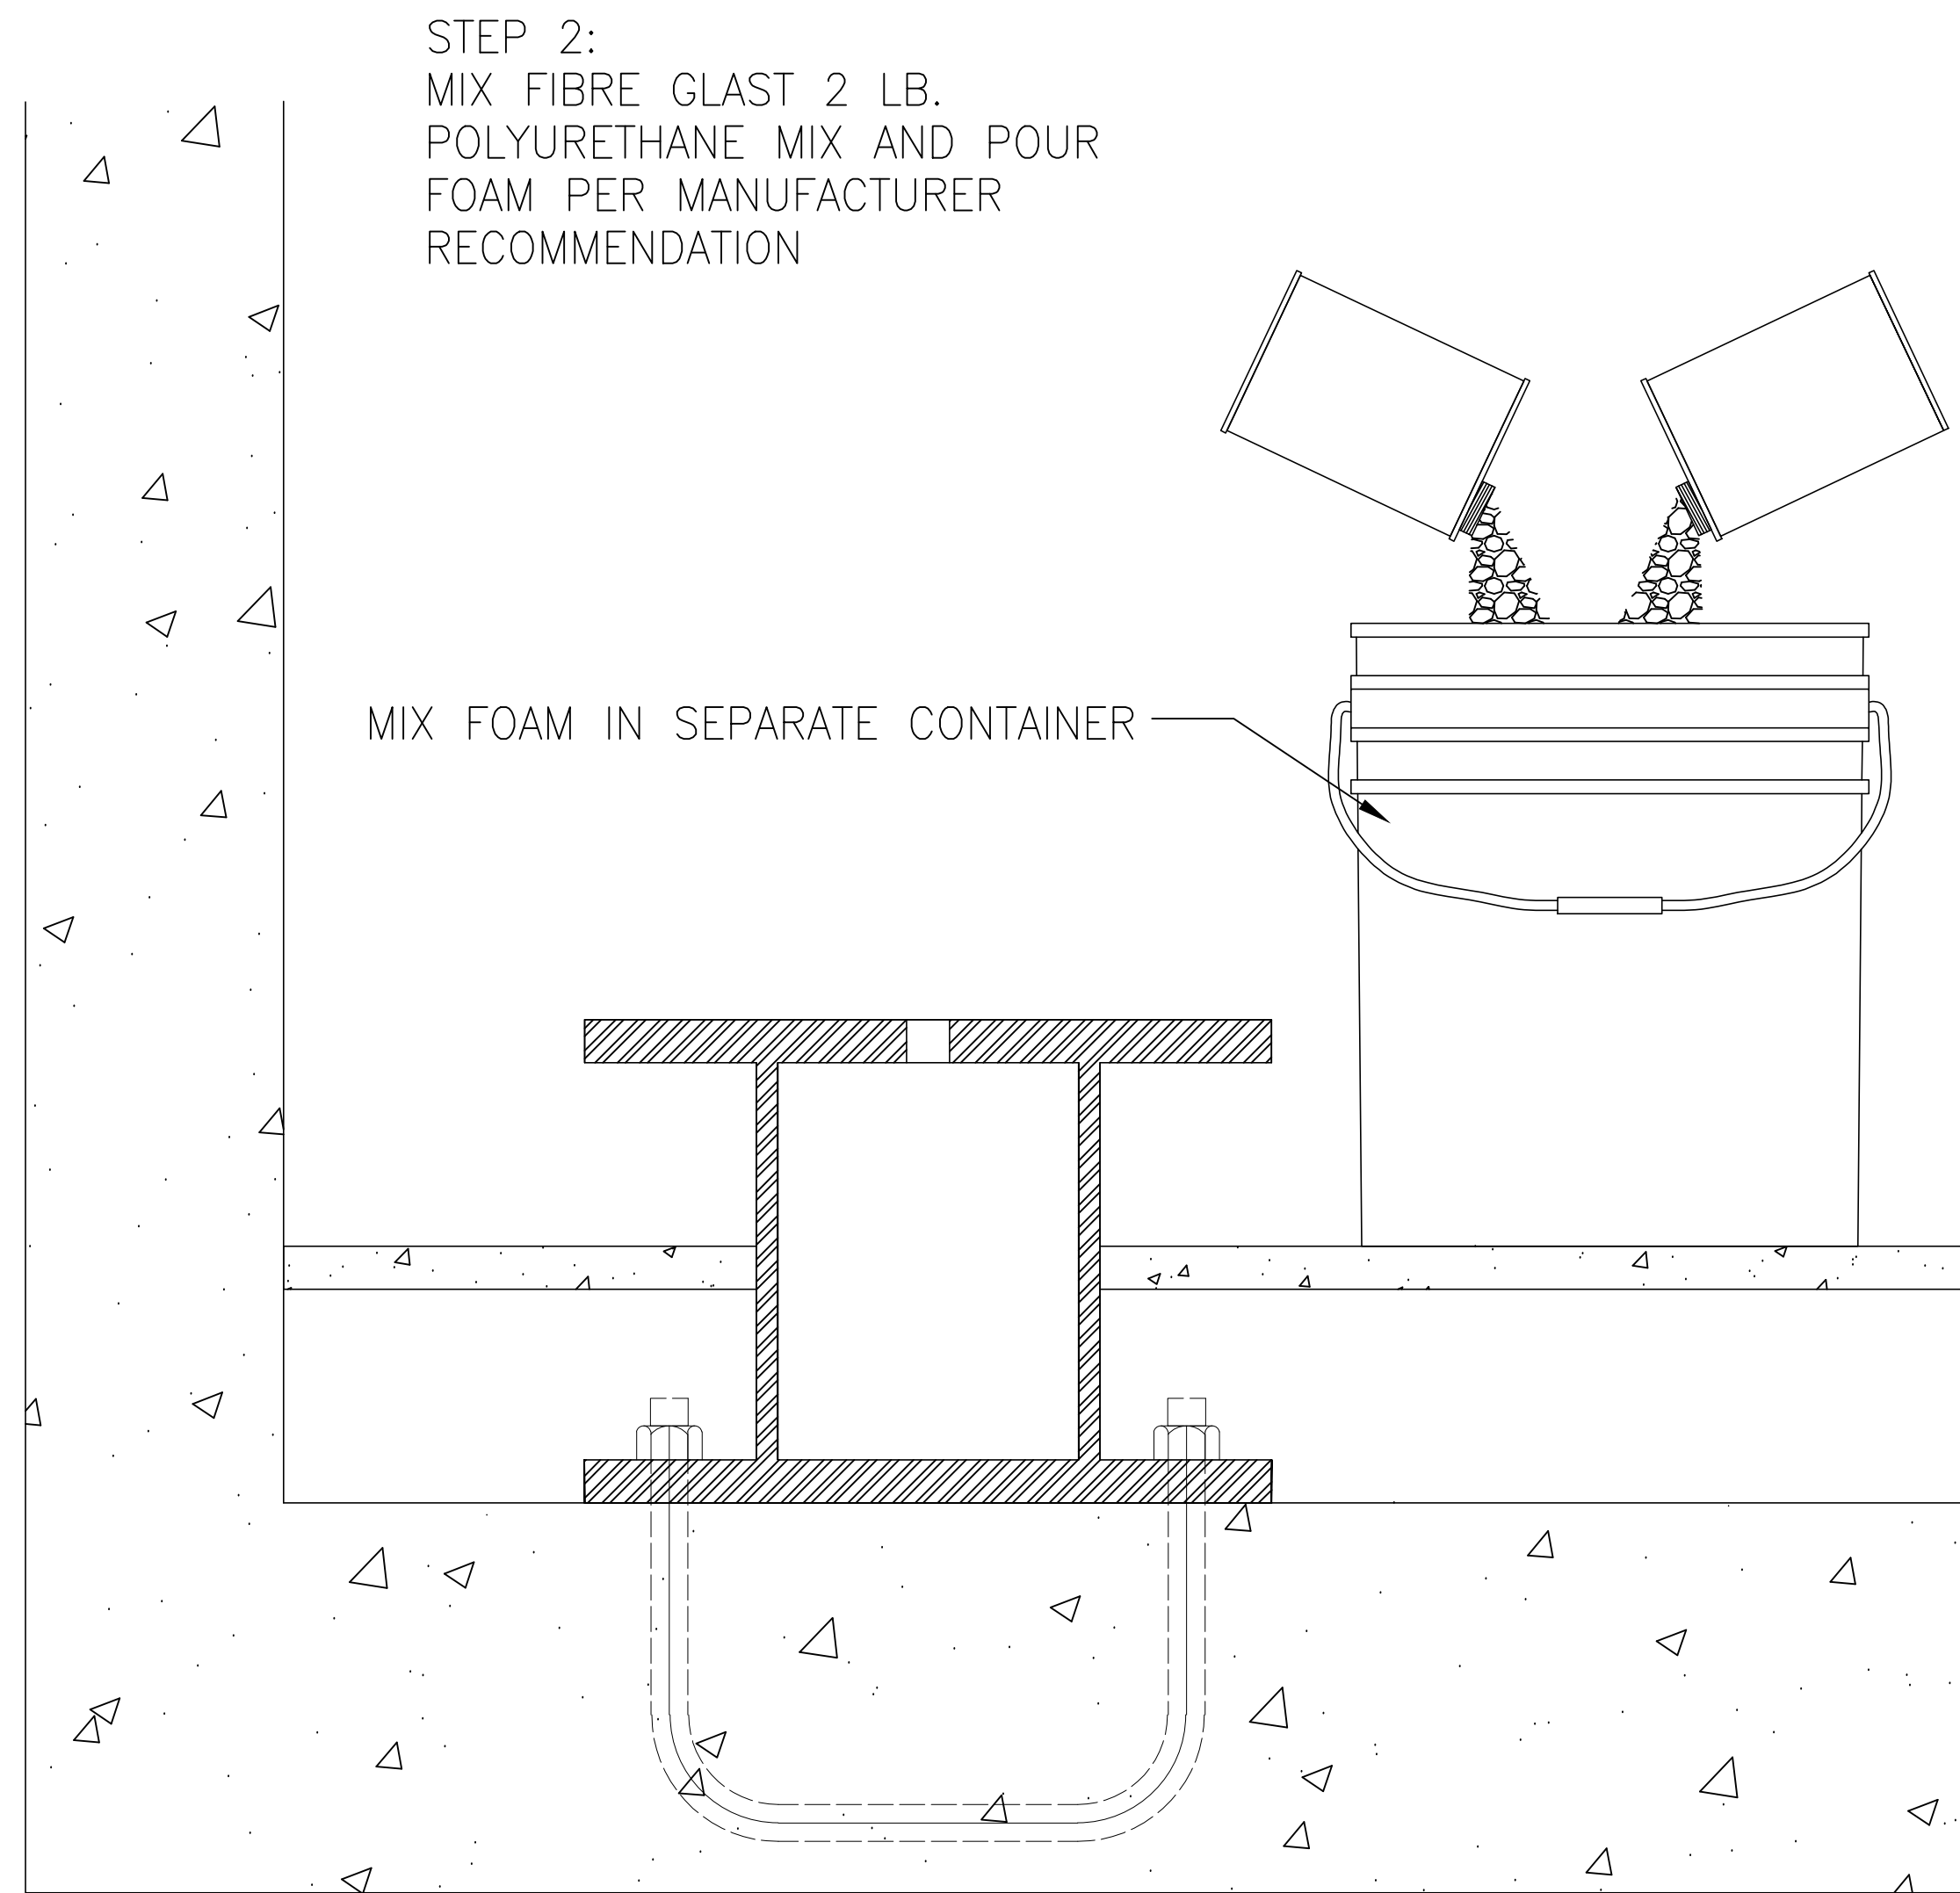


2 STEP TWO
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

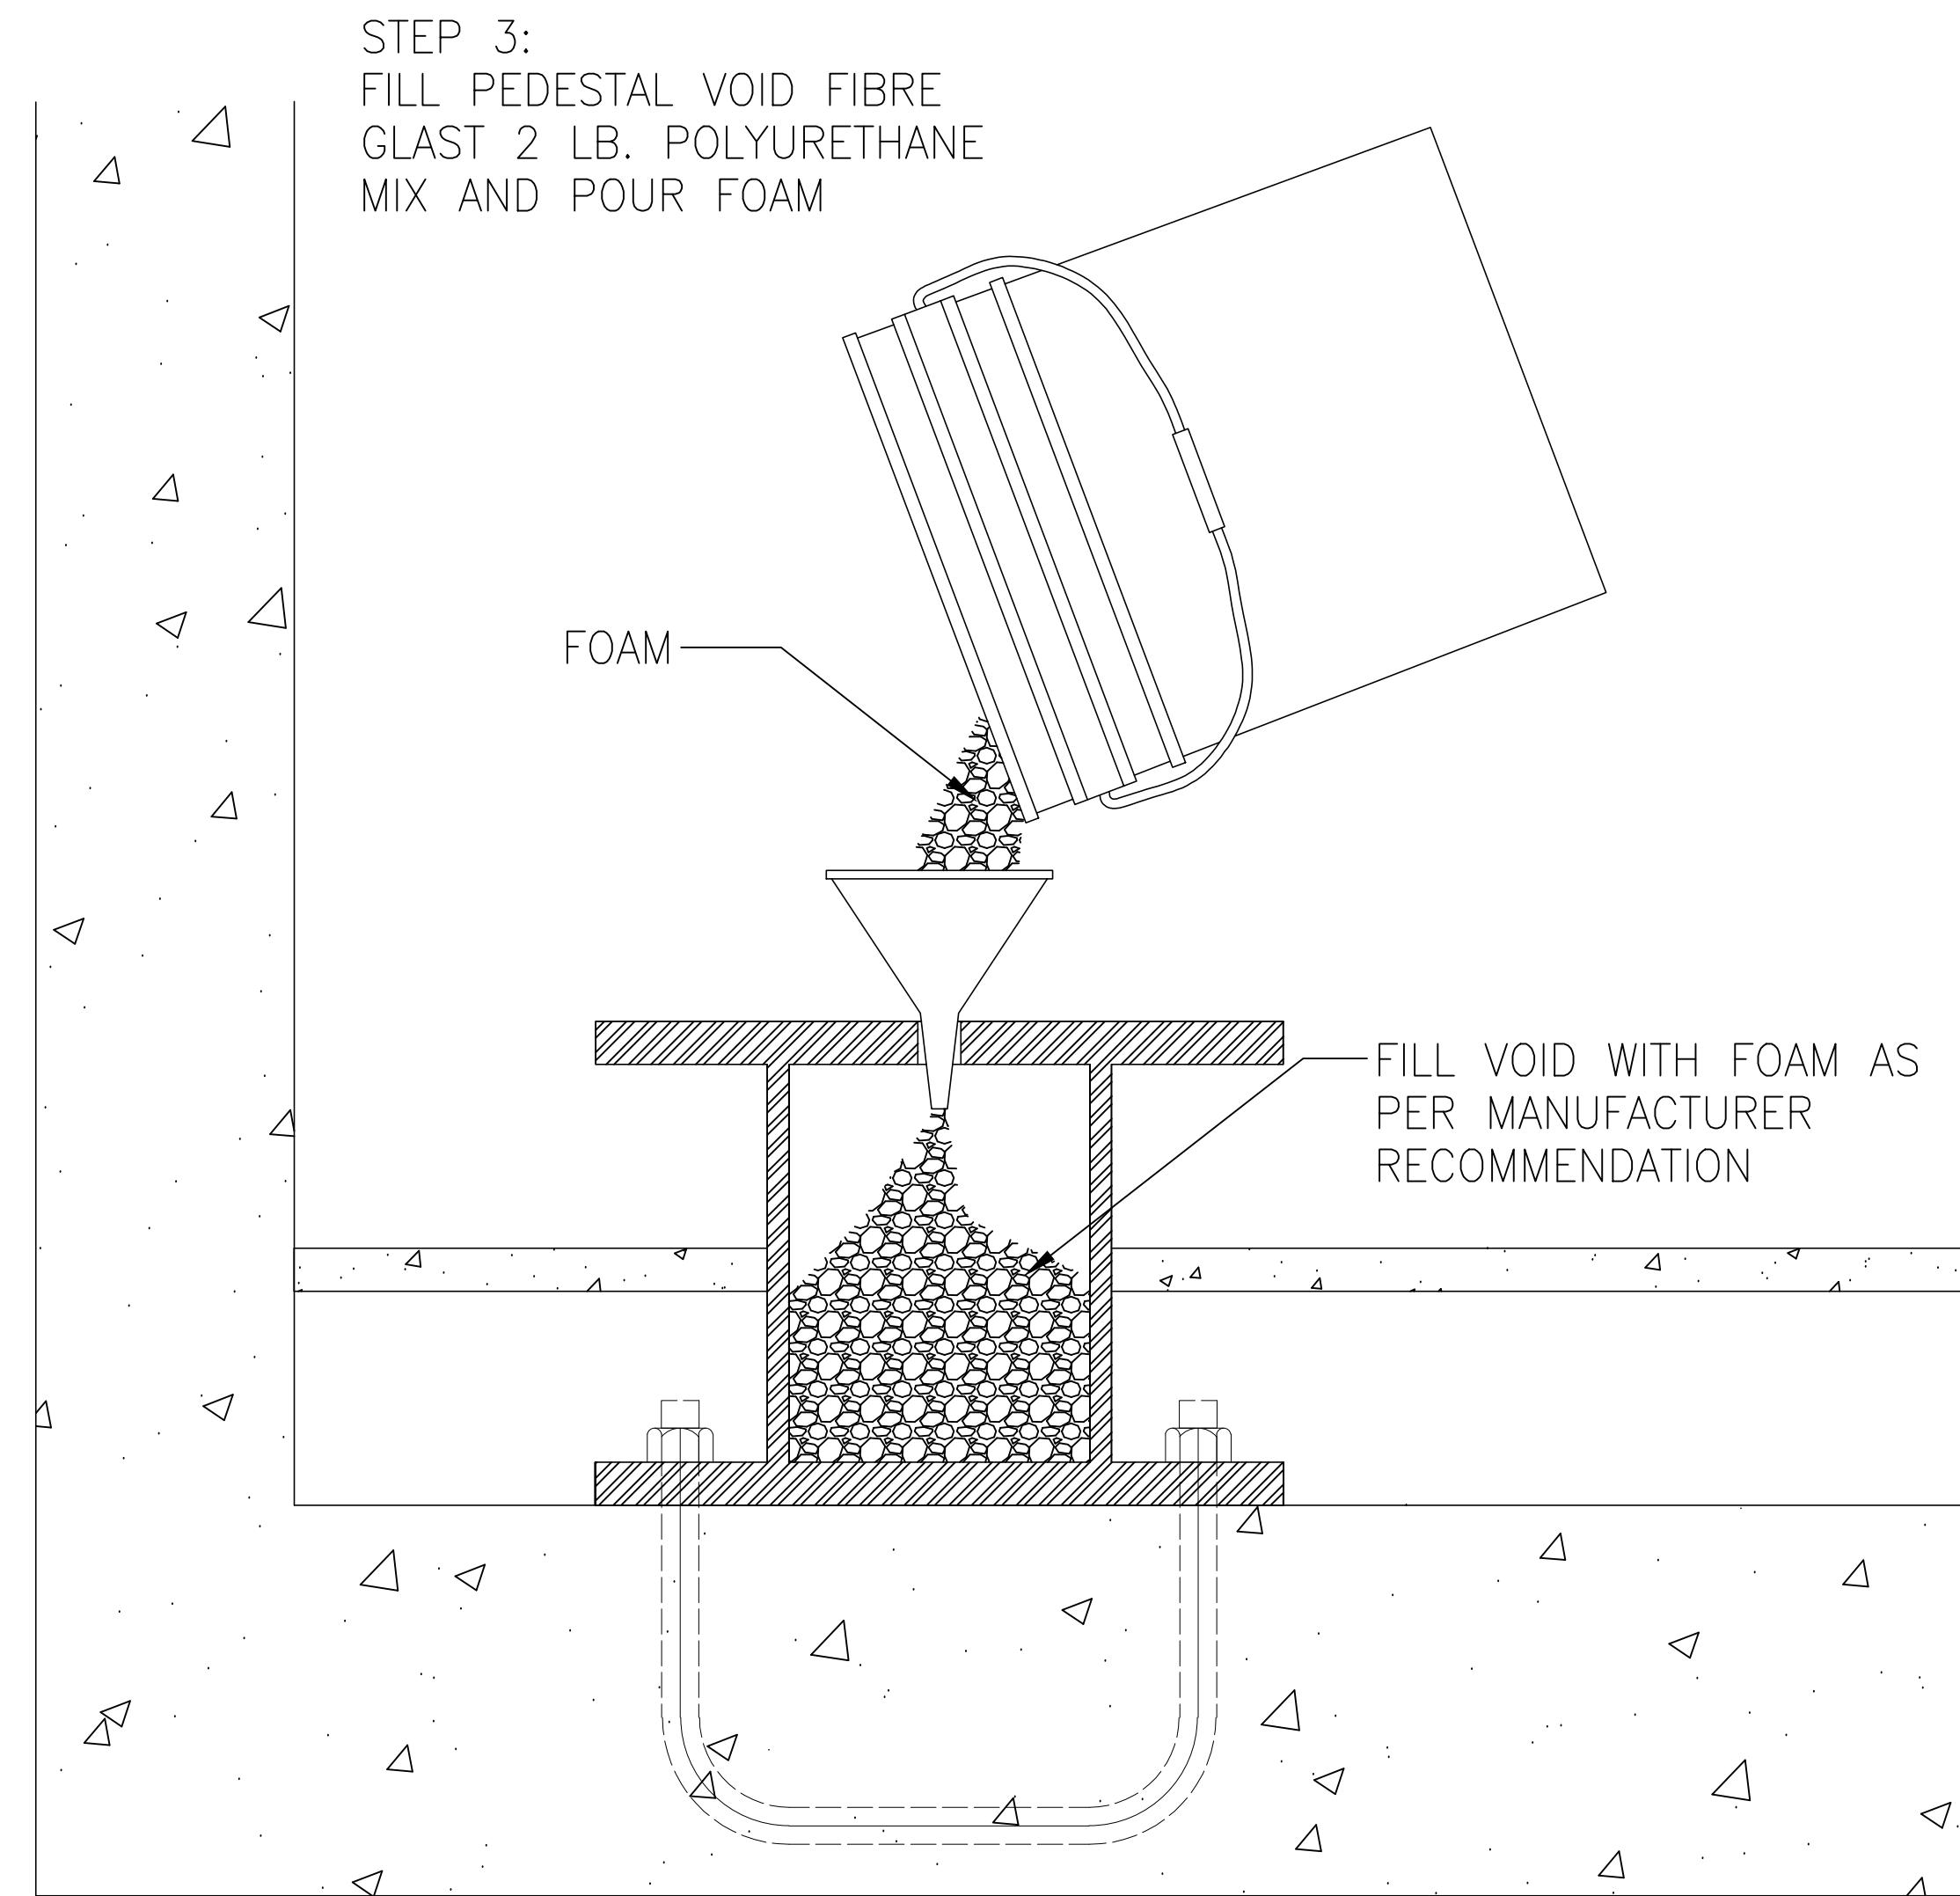


3 STEP THREE
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

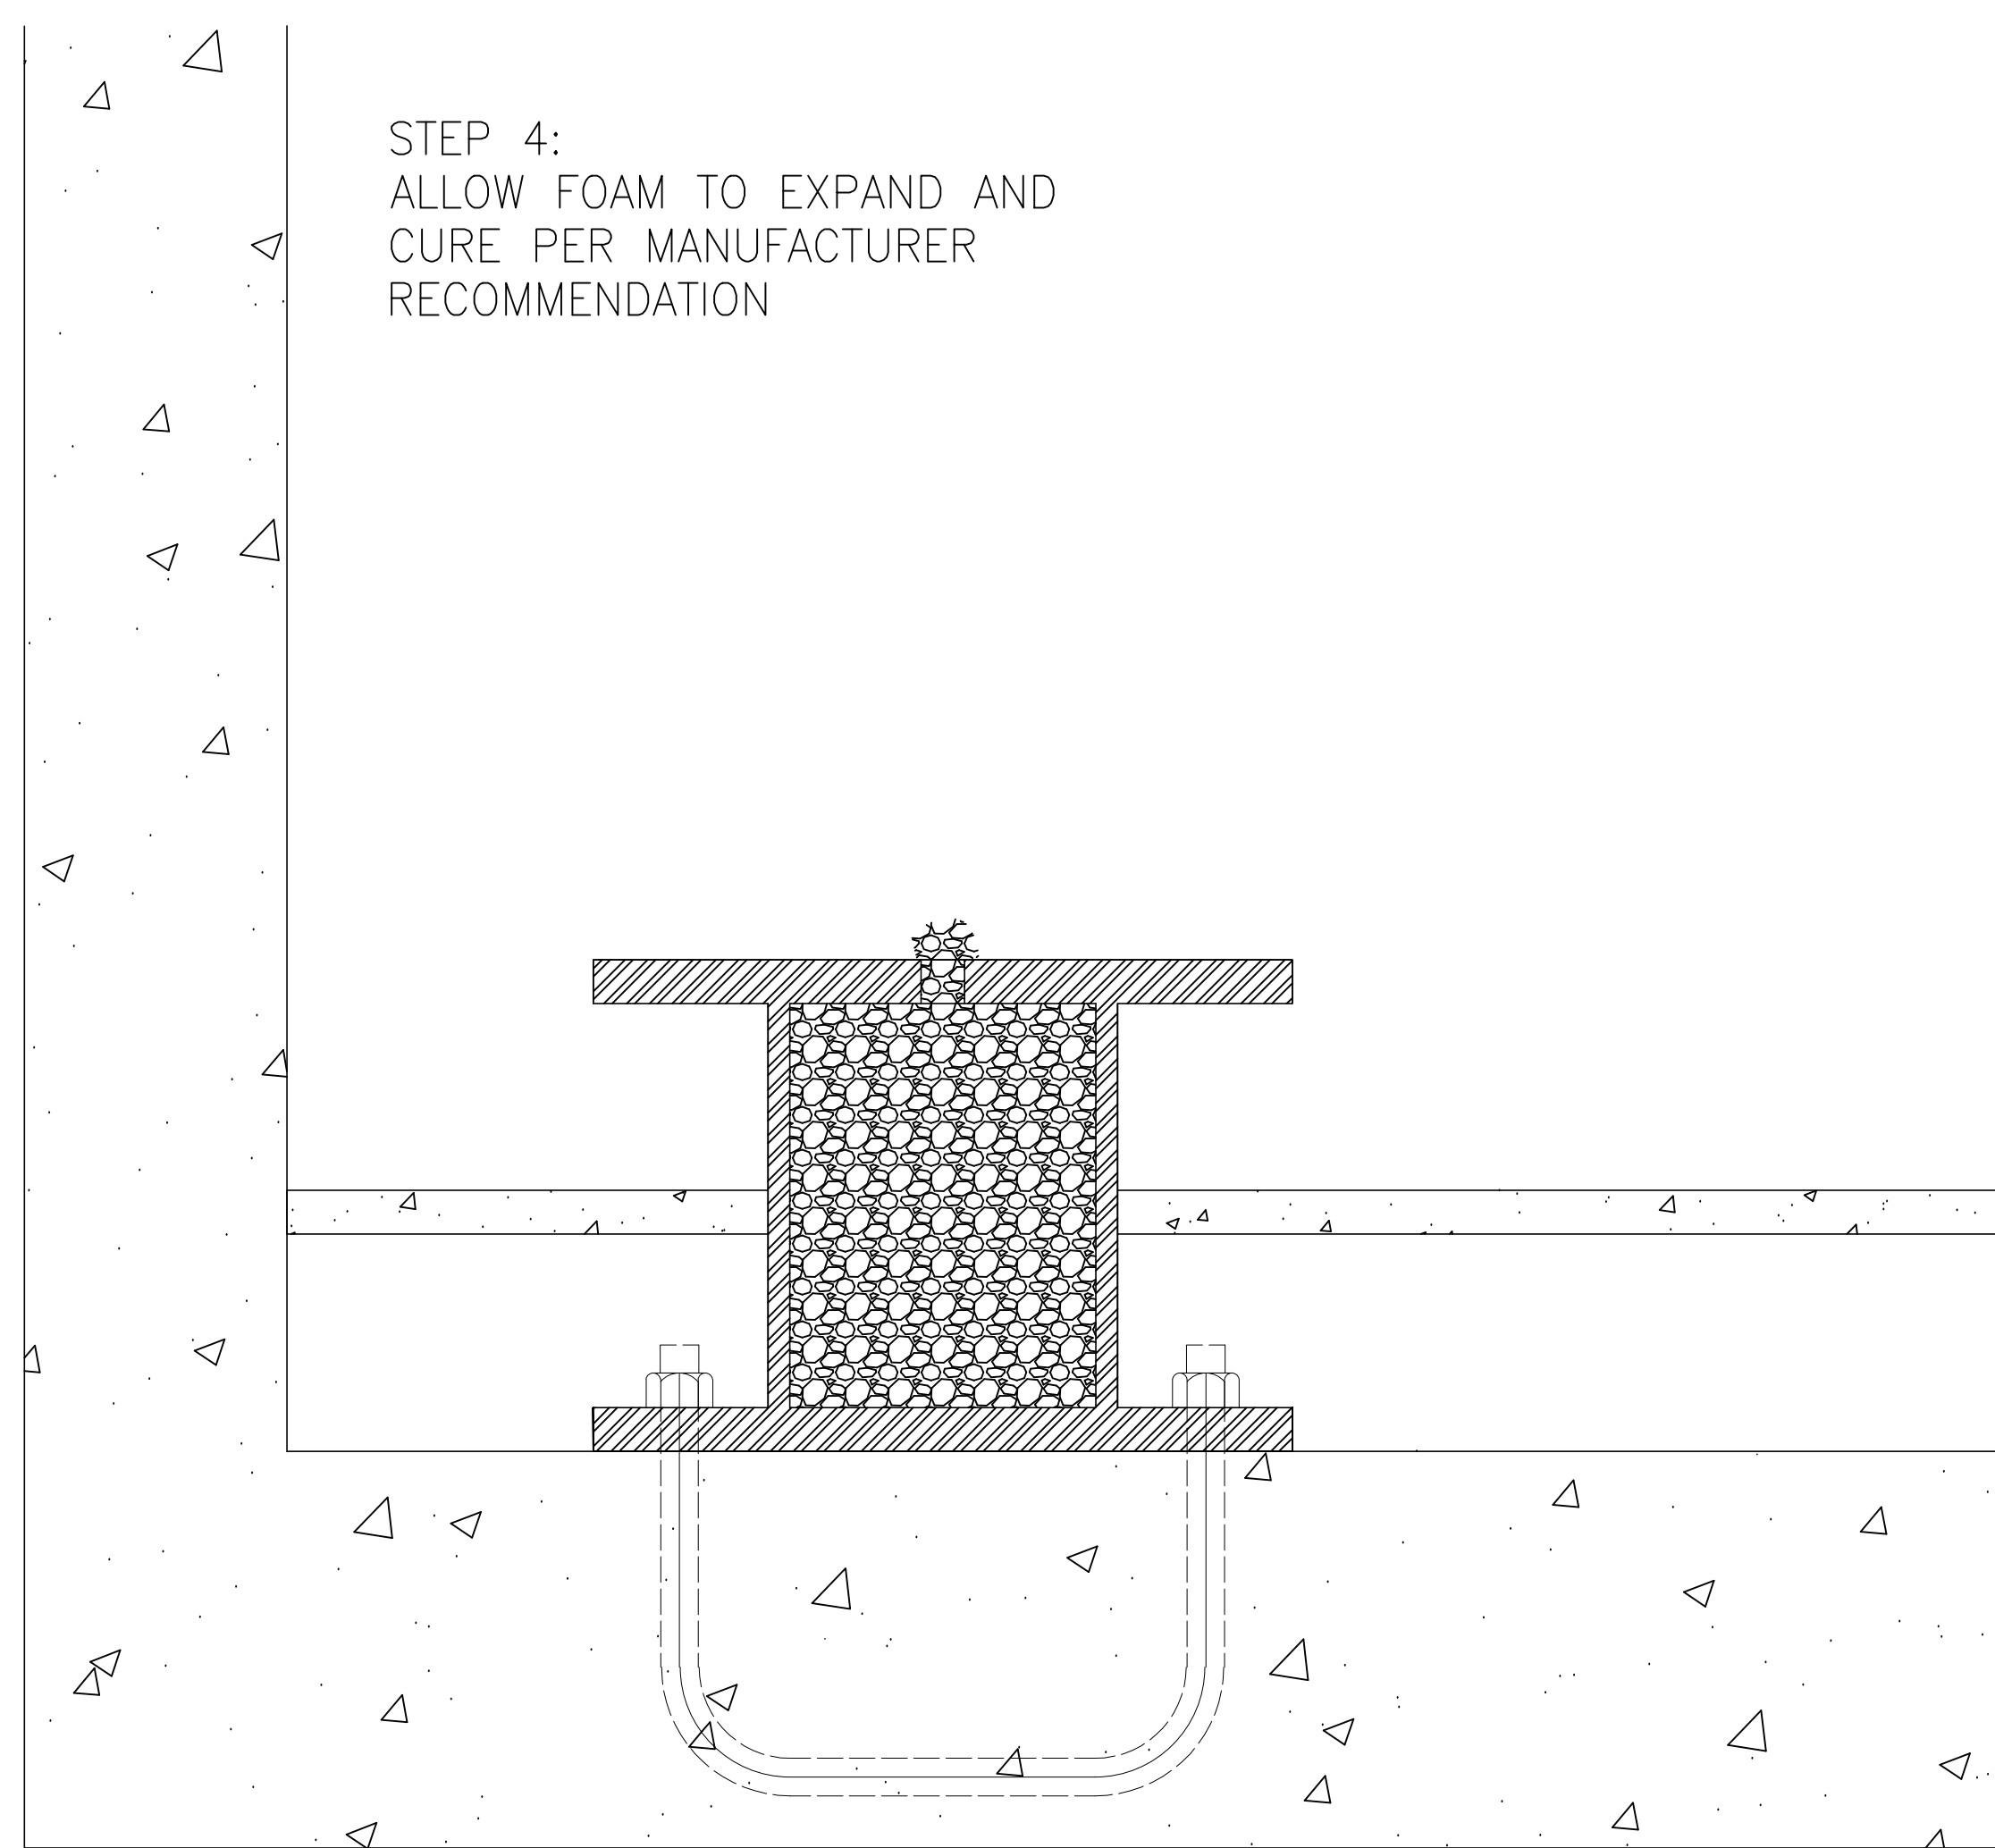

4 STEP FOUR
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

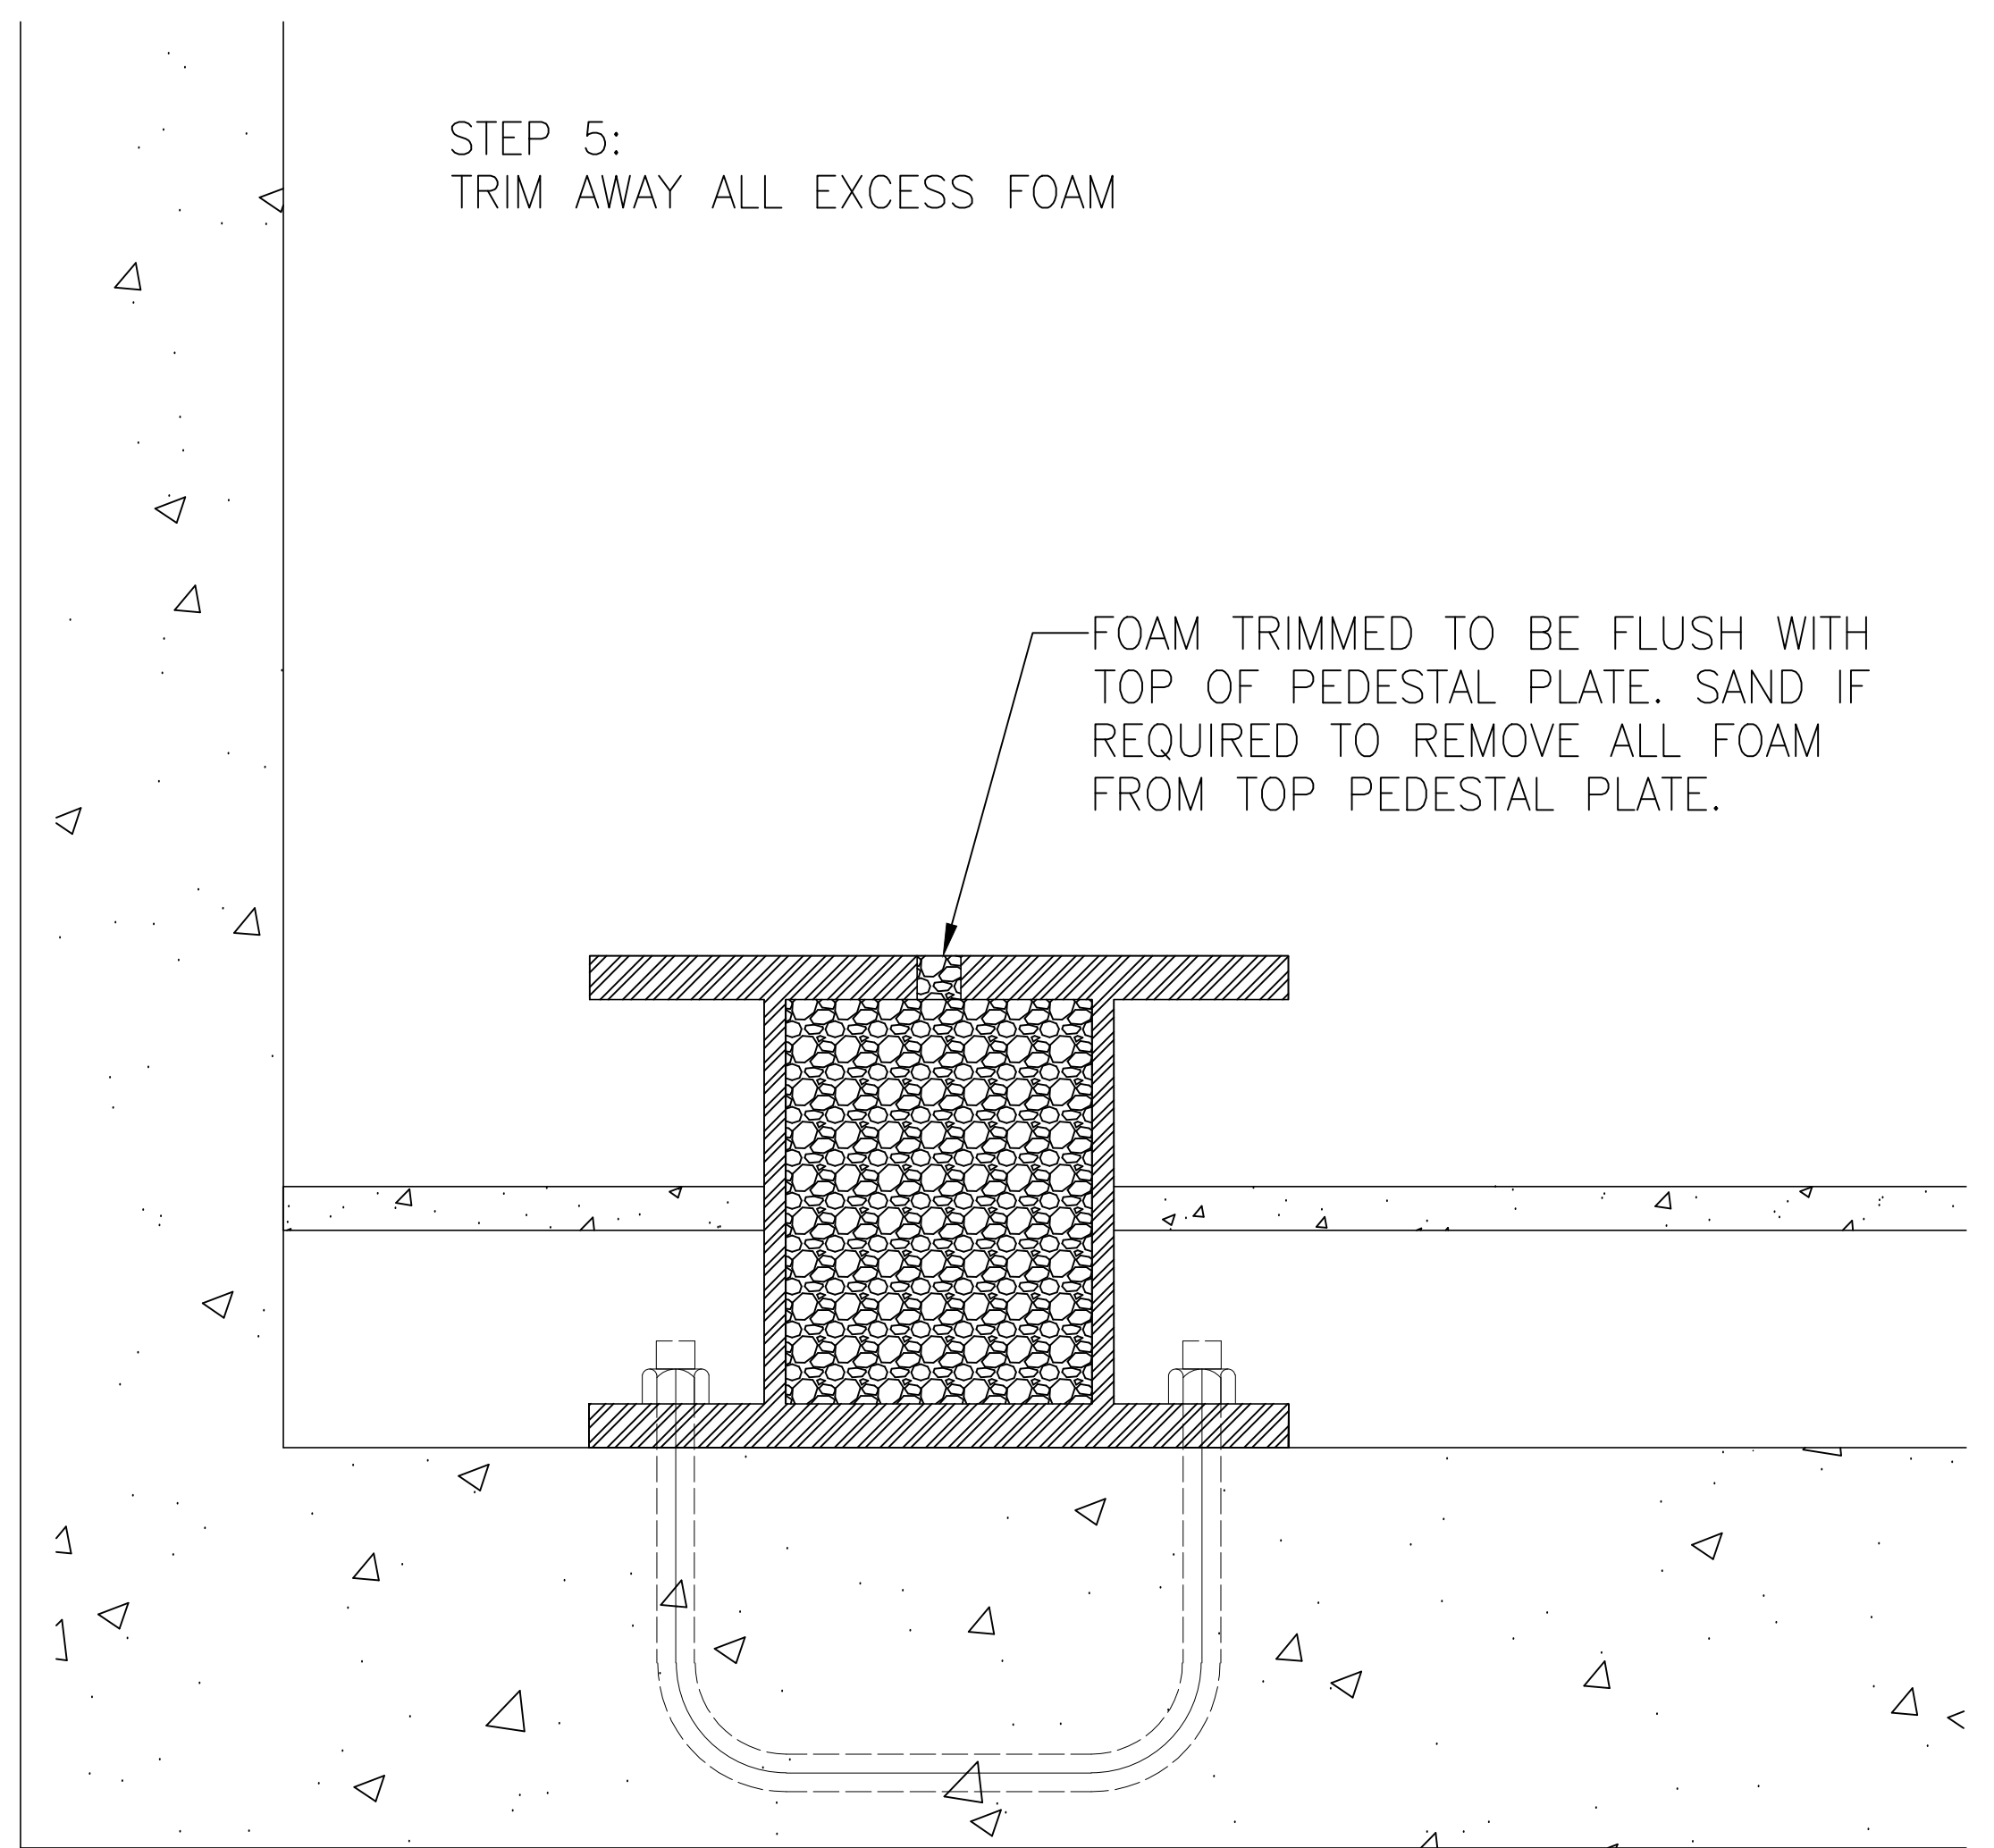

5 STEP FIVE
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

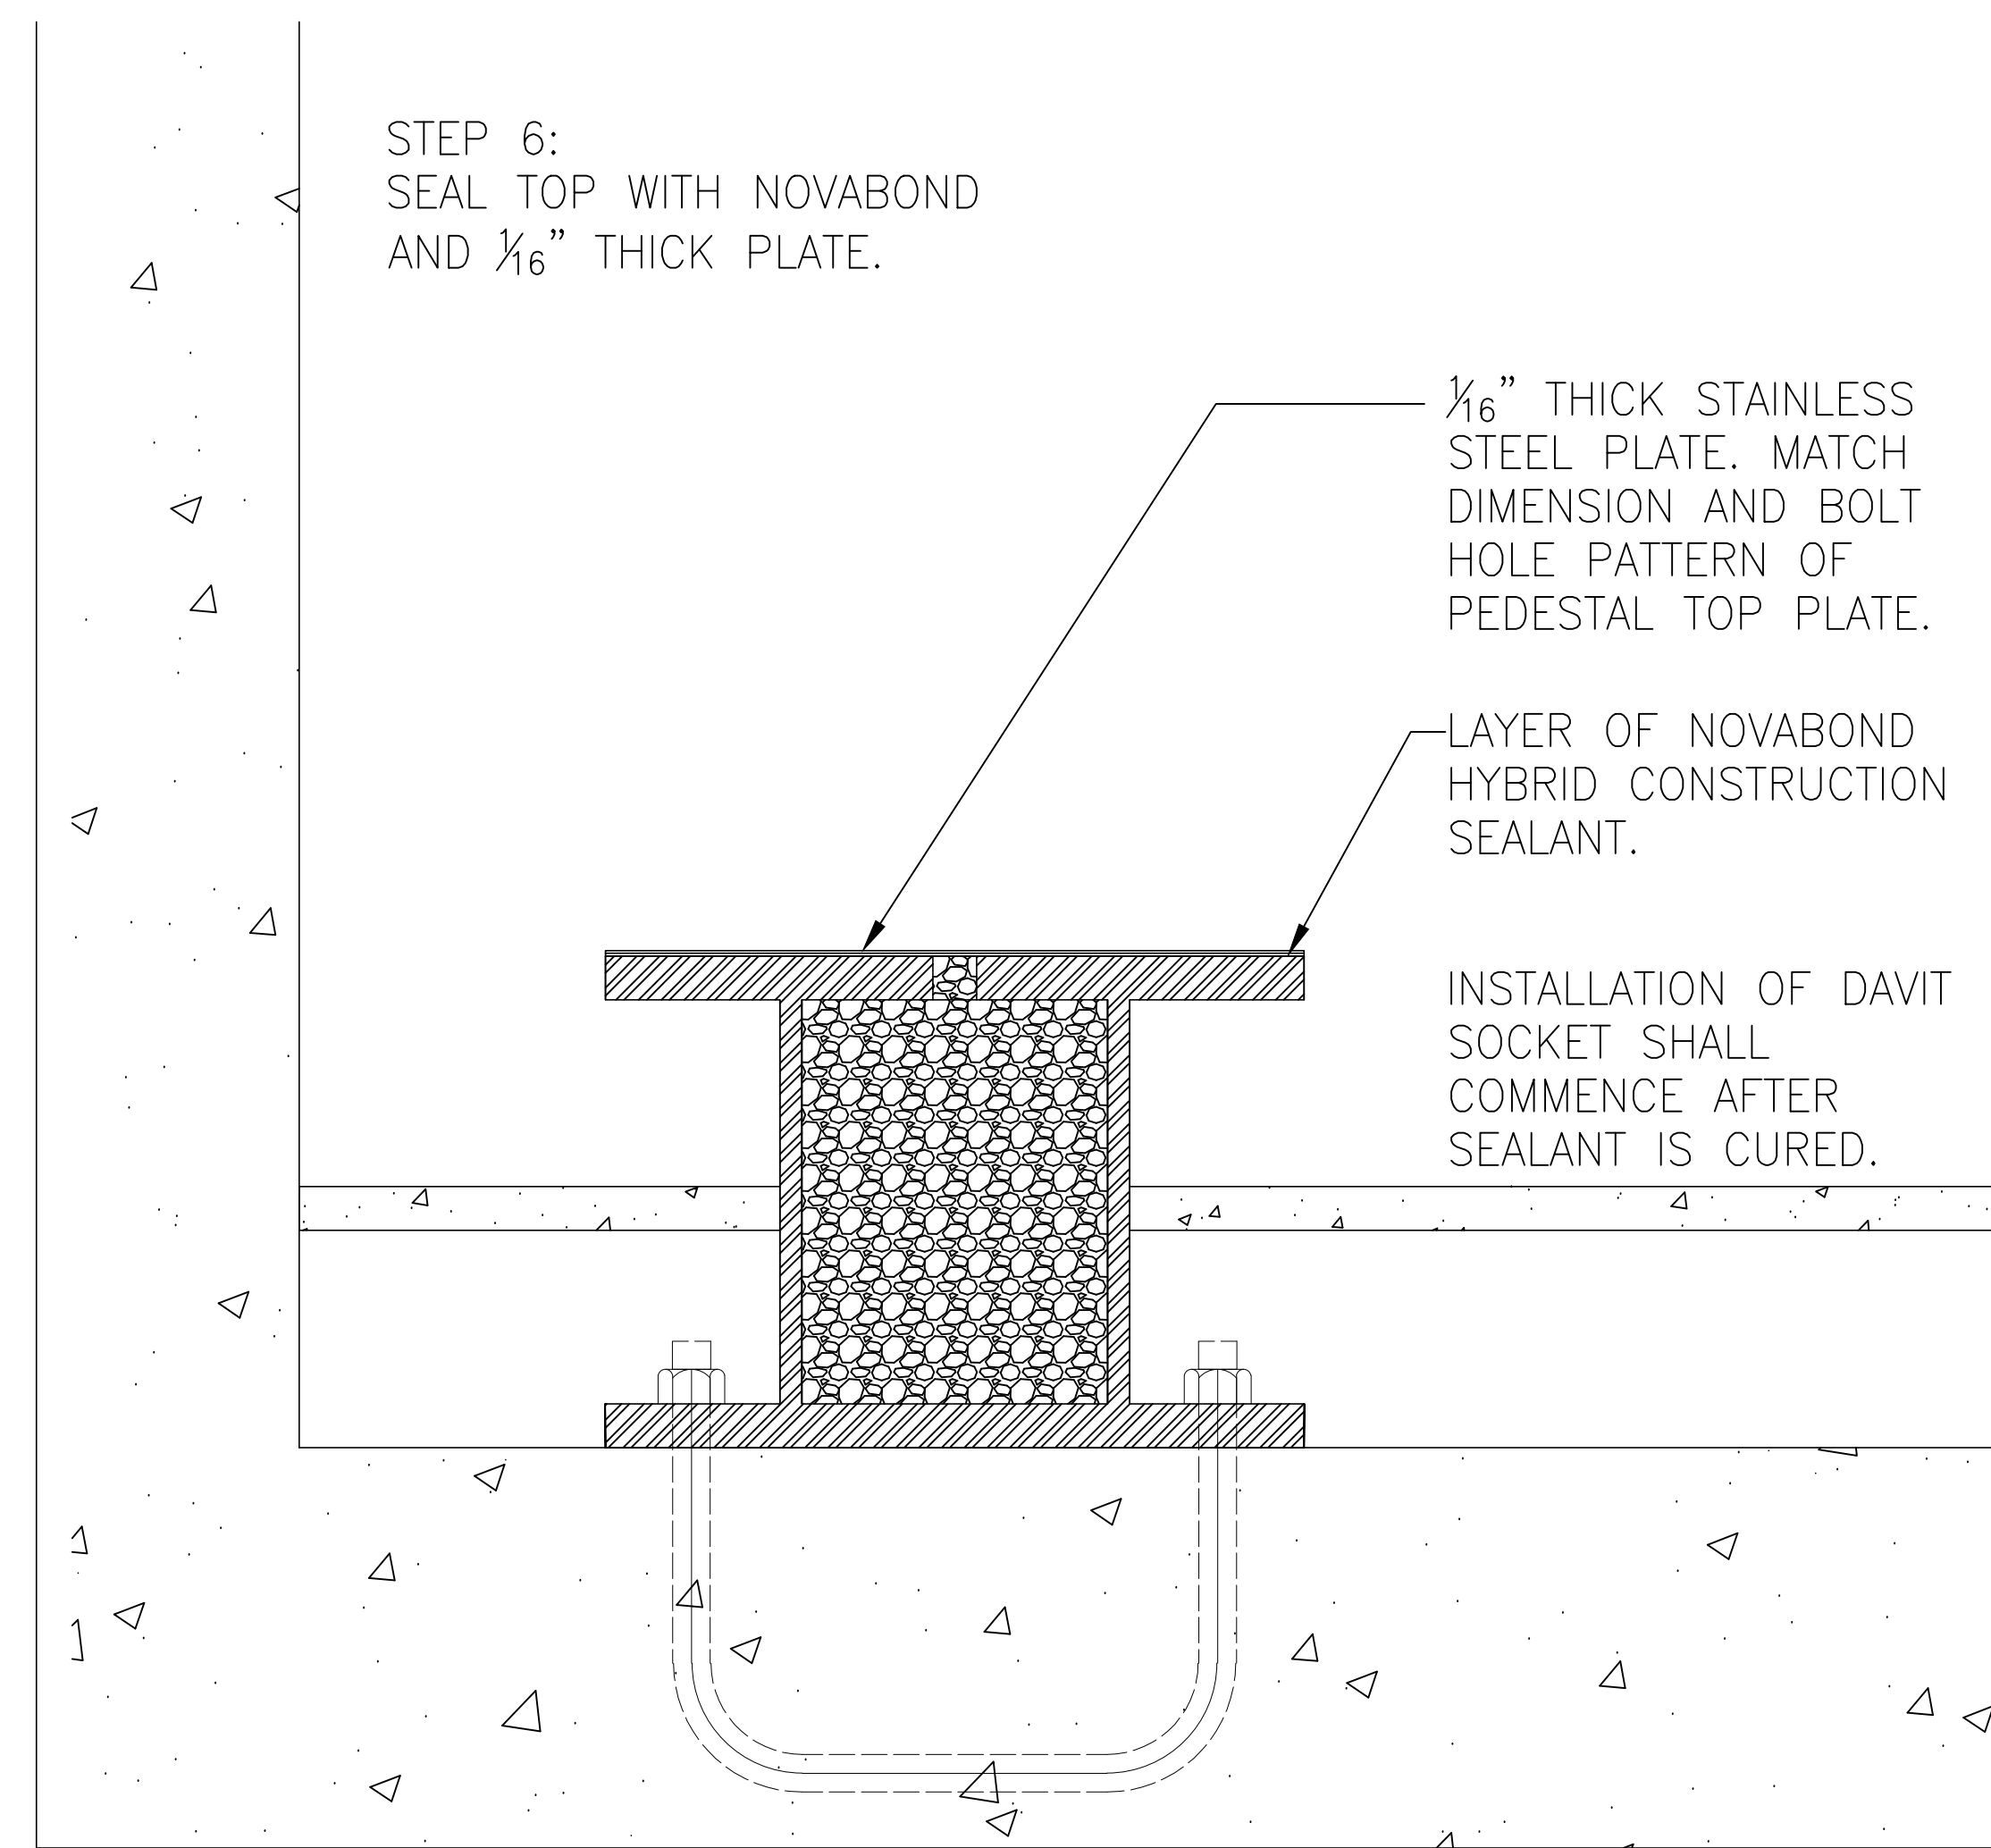

6 STEP SIX
QM.501 SCALE: 3" = 1'-0" 0 3" 6" 1'

TITLE
**DAVIT
WATERPROOFING
PROCEDURE**

JOB NO.

DATE

DRAWING NO.

SCALE